

How to upgrade the firmware on the ECB6200 adapter.

1. Download the firmware file and extract the `ecb_flashimage_2_11_1_50_6200_7.bin` to the desktop.
2. Connect an Ethernet cable between the computer and the adapter.
3. Set a static IP of **192.168.144.5** on the computers network adapter. No need for subnet mask, gateway/router or dns addresses.
4. Open a web browser and type "**192.168.144.30**" and press enter.
5. This will load the adapter interface. No admin user name or password required.
6. Click on **SW Update** on the left menu.
7. Click on the "**Choose File**" button and select the "**ecb_flashimage_2_11_1_50_6200_7.bin**" file.
8. Click on the "**Upload**" button. The unit will load the new firmware then reboot the adapter.
9. Verify the **SW Version** now shows "**2.11.1.50.6200.7**" on the **Device Info** page.